

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## User manual

# Bluetooth<sup>®</sup> compatible speaker



Référence : TES157  
Version : 1.3  
Language : English

# Clip Sonic<sup>®</sup>


TECHNOLOGY

## User manual

Thank you for buying our CLIP SONIC product.

We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website [www.clipsonic.com](http://www.clipsonic.com)

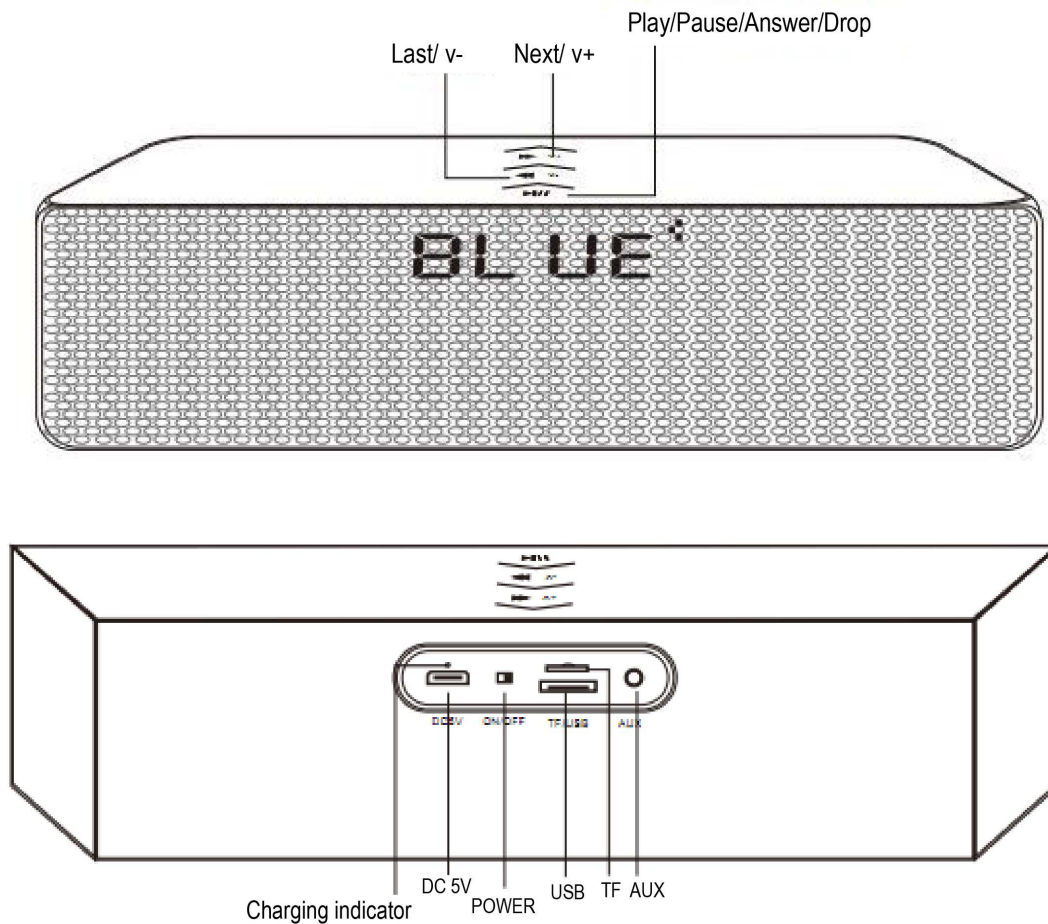

### Charging The Battery

Before using, fully charge the battery using the supplied USB cable. Plug in to any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.).

A audible tone indicates Low Battery.

A solid red LED indicates that the speaker is charging, when fully charged it will turn off.

### Power on/off

Move the power switch to the "on" or "off" side to power on /off the device.

### Bluetooth<sup>®</sup> Pairing

With the Speaker turned on, it comes to pairing model. Open the Bluetooth settings of your phone, tablet or other Bluetooth enabled audio device and select BLUETOOTH SPEAKER.

# Clip Sonic<sup>®</sup>

TECHNOLOGY

## User manual

### Playing Music

Select a song, artist, genre, or play list on your phone, tablet or other Bluetooth enabled audio device. Press the play button to start or pause the music.

Short press the last button or next button to go to next or last song.

Long press the last button or next button to adjust volume.

### FM radio function

With the speaker turned on, long press play button into radio model.

Press play button to search for available station automatically.

Press Last and Next button to choose specific station you want.

### AUX./USB Flash/TF playing

Play music directly when insert in TF card and USB flash.

Long press play button to switch between Bluetooth/Radio/AUX/TF card/USB Flash

### Hands-free For Calling

Answer or Drop a call by short pressing the answer button.

Reject a call by long pressing the answer button for 3s.

**Note: After making or dropping a call the speaker will re-start your music.**

LED Indicator	Status of the speaker
Red LED light on	Battery is charging
Red LED light off while charging	Battery is full

### Specifications

Bluetooth Version	V3.0
Bluetooth profiles	HSP, HFP, A2DP
Range	Up to 10 meters
Number of paired devices in memory	Up to 8
Music playing time	Up to 6 hours
Charging time	About 3 hours
Dimensions	280*60*68mm
Weight	552g

### Package Contents:

USB-charge cable

3.5mm Audio cable

This Owners manual

# Clip Sonic®

TECHNOLOGY

## User manual



Correct disposal of the unit  
(Electrical and Electronic Equipment)  
(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.

CE



Pour en savoir plus :  
[www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

## CLIP SONIC

BP 61071

67452 Mundolsheim

- Non contractual illustration
- Product information is subject to change without prior notice.