

Bluetooth[®] compatible speaker



Référence : TES158
Version : 1.3
Language : English

Clip Sonic®


TECHNOLOGY

User manual

Thank you for buying our CLIP SONIC product.

We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is also available on our website www.clipsonic.com

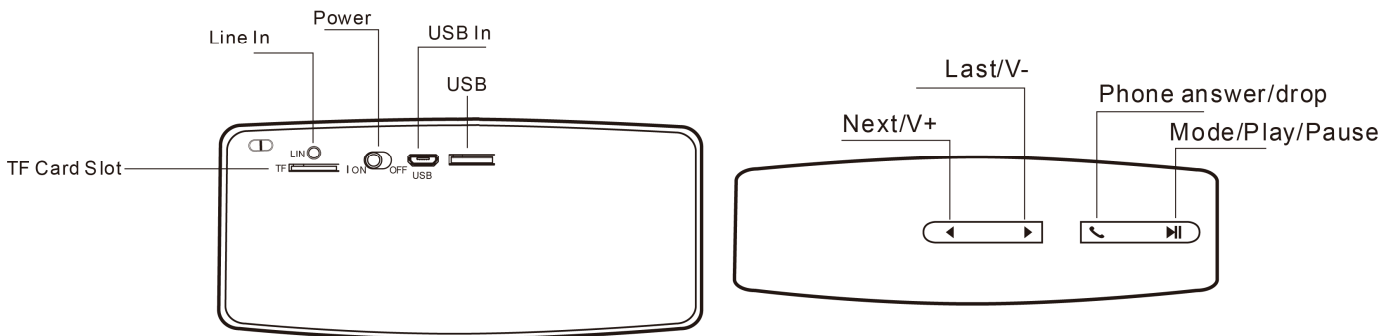

Charging the Battery

Before using, fully charge the battery using the supplied USB cable. Connect the „DC5V“ charging slot to any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.).

A solid red LED indicates that the speaker is charging, it will turn off when fully charged.

NOTE : The charging time takes approx. 2 - 3 hours.

Power on/off

Move the power switch to the “on” or “off” side to power on /off the device.

Bluetooth® Pairing

With the device turned on, it comes to pairing mode with flashing blue light. Open the Bluetooth settings of your phone, tablet or other Bluetooth enabled audio device and select MINI SPEAKER. When prompted for the pairing code, enter 0000. Once paired, one solid blue LED light will be on.

Playing Music

Select a song, artist, genre, or playlist on your phone, tablet or other Bluetooth enabled audio device.

Press Mode/Play/Pause button briefly to play or pause the music.

Press Next/V+ and Last/V- to adjust volume and go next/last song. (Longer press for volume adjustment).

Hands-free for Calling

Answer or Drop a call by pressing the Phone answer/drop button once quickly.

Reject a call by pressing the Phone answer/drop button for about 3 seconds.

Redial the last call by pressing the Phone answer/ drop Button for about 3 seconds.

Note: After making or dropping a call the speaker will re-start your music.

Clip Sonic[®]

TECHNOLOGY

User manual

TF Playing/Aux

Play music of TF directly when insert in TF card.

Press Mode button to switch between Bluetooth/TF card/Aux function when insert TF card

Insert USB flash and music will be played automatically.

Radio Function

Choose FM mode with help of the Mode/Play/Pause button (press long).

In FM mode press Mode/Play/Pause button briefly start automatic station search, press again to stop automatic search.

Press Last and Next button briefly to choose specific station you want.

LED Indicator	Status of the speaker
Blue LED light flash	Pairing
Solid Blue LED light	Connected, Pause,
Blue LED light flash slowly	Playing ,Calling
Red LED light on	Battery is charging
Red LED light off while charging	Battery is full

Specifications

Bluetooth Version	V3.0
Bluetooth profiles	HSP, HFP, A2DP
Range	Up to 10 meters
Music playing time	Up to 4 hours
Charging time	About 2-3 hours
Dimensions	118*38*54mm
Weight	145g

Package Contents:

USB cable

3.5mm Audio cable

Owners manual

Clip Sonic®

TECHNOLOGY

User manual



Correct disposal of the unit
(Electrical and Electronic Equipment)
(Applicable in the European Union and the rest of Europe that have adopted separate collection systems countries)

The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal household waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The symbol of the crossed out dustbin is marked on all products to remind the obligations of separate collection. Consumers should contact their local authority or retailer for information concerning the correct disposal of their product.



Pour en savoir plus :
www.quefairedemesdechets.fr

CLIP SONIC

BP 61071

67452 Mundolsheim

- Non contractual illustration
- Product information is subject to change without prior notice.